


Blocker Installation Instructions



Take the instructions with you on your mobile device.

Tools and Hardware Required

- Blocker door stop
- Concrete anchor
- Torx security bolt
- Washer
- T27 Torx security bit and driver
- Thread locking agent
- 1/2" concrete bit
- Anchor setting tool
- Hammer
- Pliers
- Concrete drill

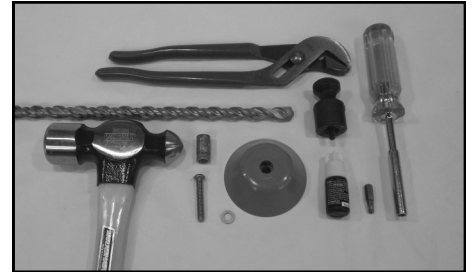

1. First determine where on the wall the door stop will be located, mark the center
2. Drill a 1/2" hole in the concrete where the anchor will be located (1.5" deep min.)
3. Thread the concrete anchor onto the anchor setting tool with ****the wedge end away from the tool****
4. Insert the anchor into the hole until the setting tool contacts the wall
5. Strike the flat end of the setting tool using medium force with the hammer until setting tool bottoms out
6. Unthread the setting tool out of the anchor using the pliers
7. Thread the washer onto the bolt, then insert the bolt into the door stop
8. Apply 2-3 drops of recommended thread locking agent to the end threads of the bolt
9. Thread the bolt into the concrete anchor and tighten hand tight, torquing to approx. 24 in/lbs.
10. Open door and check for proper placement

